


SolarBalcony MAC

Code-Compliant Planning and Installation Guide V 1.0

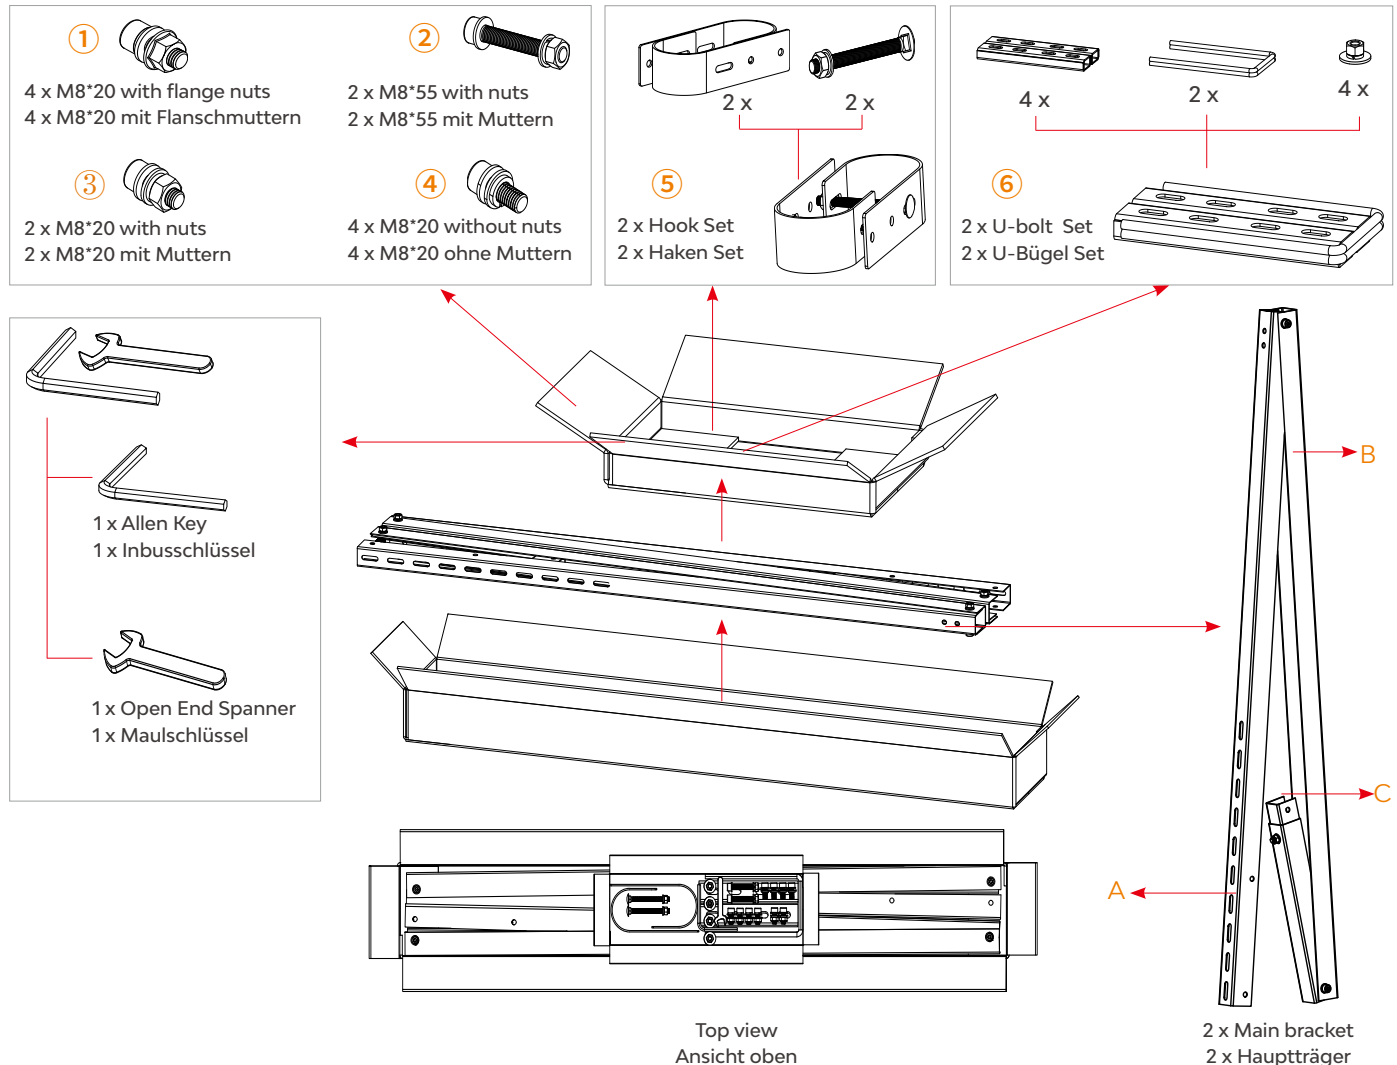


Application

Balcony Scenario
Szenario Balkon


Garden Ground Scenario
Szenario Gartengelände

Wall Scenario
Szenario Mauer

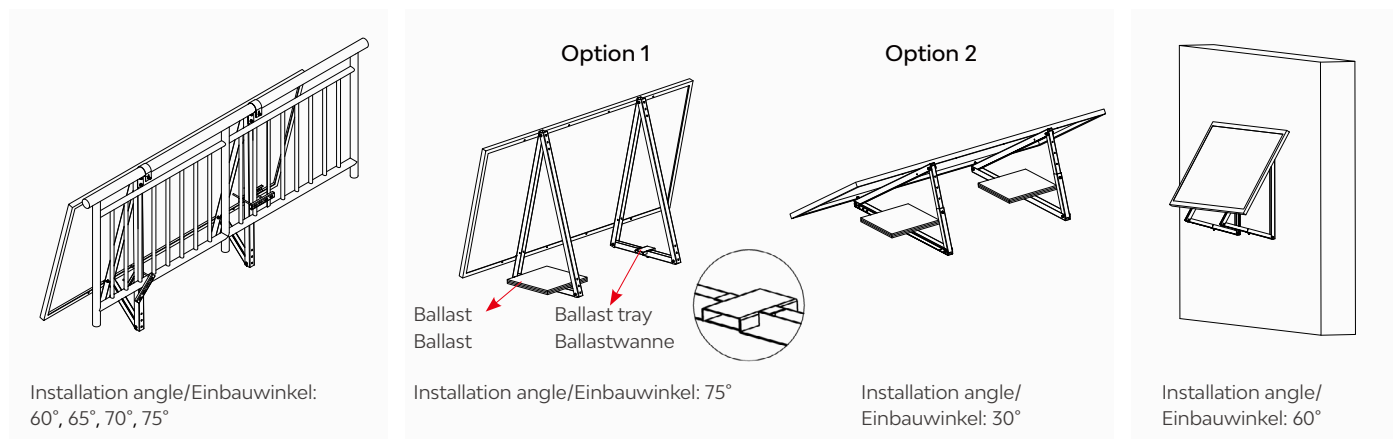

Installation Steps

Note: Recommend torque for M8 fasteners is 13-14 N·m
Hinweis: Das empfohlene Drehmoment für M8-Befestigungselemente beträgt 13-14 N·m

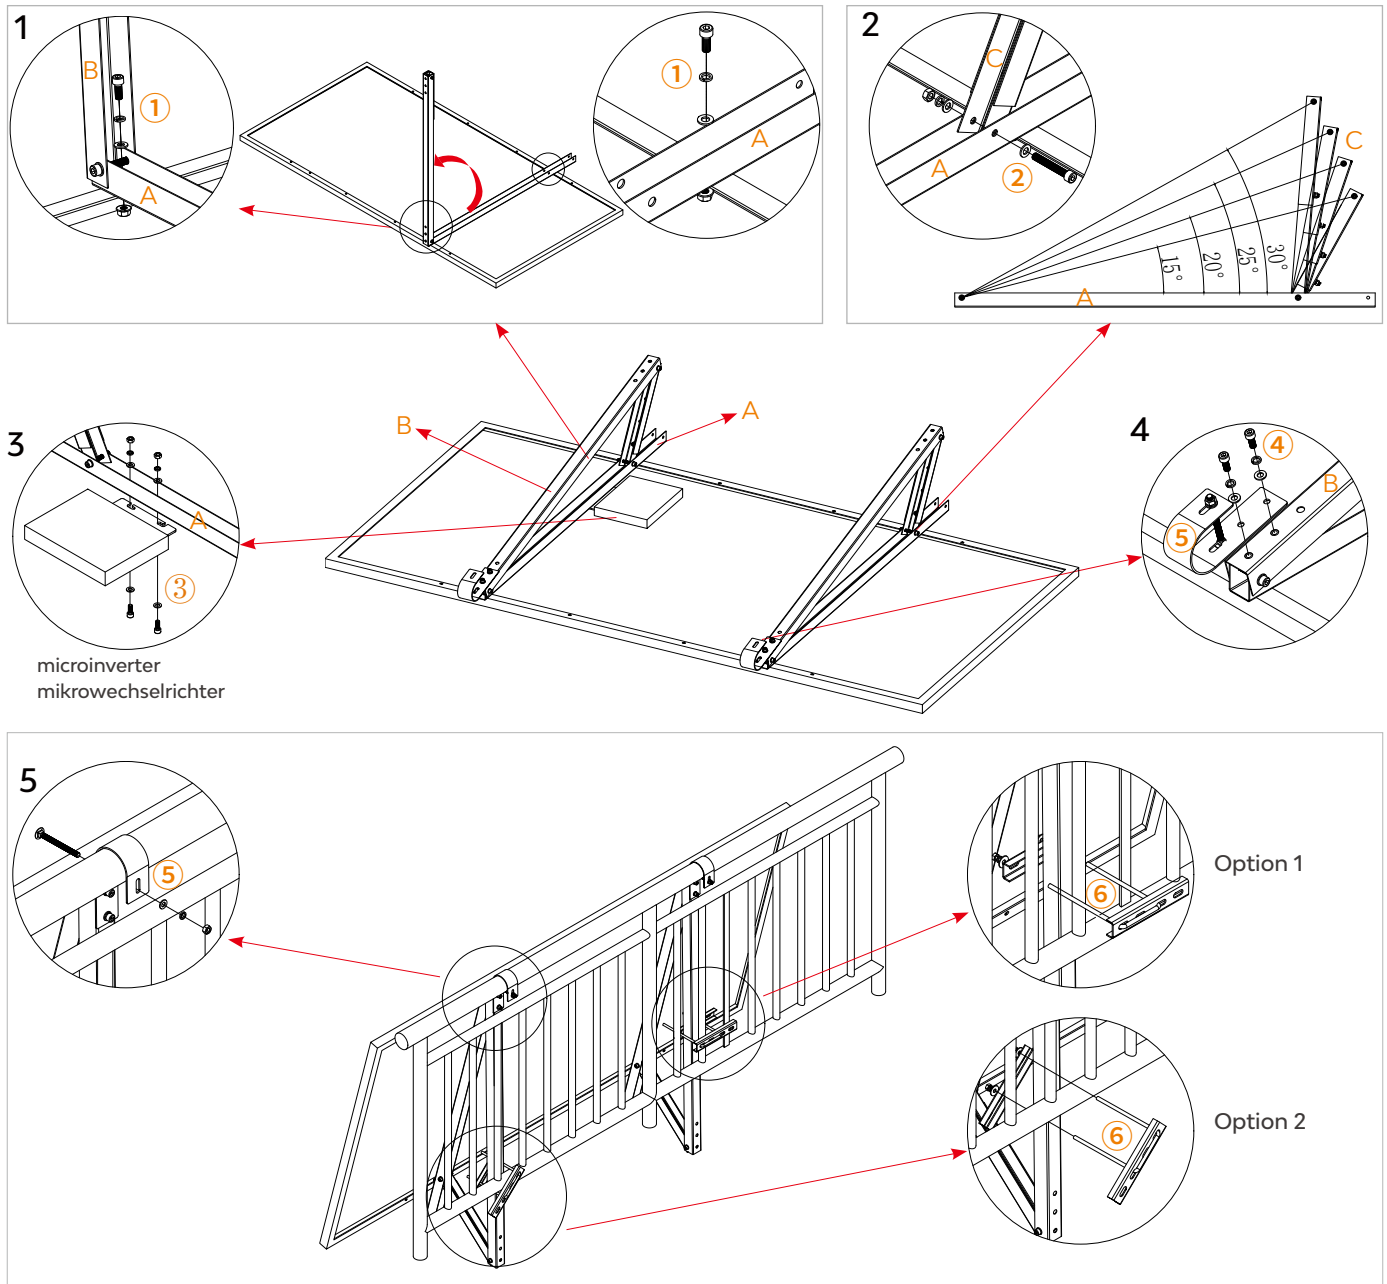

Scan to watch the
installation video